


REPLACING A UV CONTROL BOX




ALWAYS DISCONNECT THE UV FROM THE MAINS POWER BEFORE OPENING THE CONTROL BOX

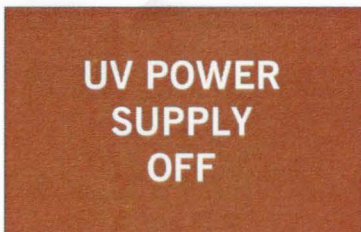

1. Disconnect the UV from the mains. You do not need to switch off the water pump.



2. Unscrew the black end caps from each end of the UV, leaving the locking nuts in place.

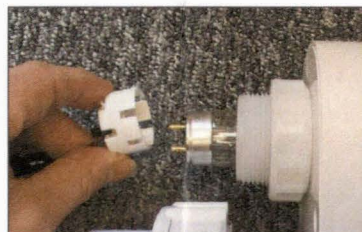

3. Remove the lamp connectors from both ends of the T8 lamp.




4. Unscrew the 4 plastic screws on the control box cover and remove the cover.




5. Unscrew the 4 screws inside the cavities on each corner of the control box.



6. Remove the control box from the brackets on the UV, but keep the 4 screws safe.

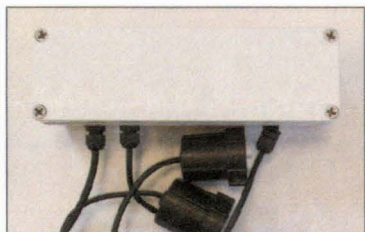

7. Unpack your new ballast box.

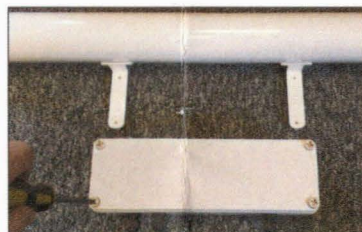

8. Unscrew the 4 plastic screws on the control box cover and remove the cover.




9. Place the control box in position on top of the brackets ready for the screws.



10. Re-fit the 4 screws inside the cavities on each corner of the control box and tighten them up.




11. Re-fit the 4 plastic screws on the control box lid and tighten up.

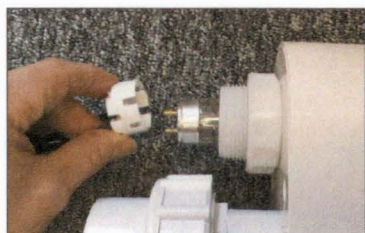

12. Re-fit the lamp connectors to each end of the T8 lamp. **ENSURE THE END CAP SEALING RING IS IN PLACE**



13. Re-fit the black end caps on each end of the UV and tighten up. **TAKE CARE NOT TO TWIST THE WIRES CONNECTING THE**

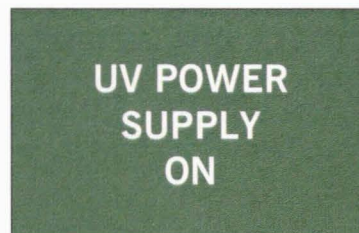

14. Once happy everything is back in place, connect the mains cable and power up the UV.

HAND TIGHTEN END CAPS ONLY - DO NOT USE TOOLS