

MAXIMUS Energy Saving Pump* ECO



INSTALLATION AND MAINTENANCE INSTRUCTIONS

**800, 1200, 1700, 2300, 3000, 4500,
6000 & 8000**

* Depending on model - Compared to previous Maximus Pump Models

 


Safety instructions for all Maximus Eco Models

Introduction

All pumps are intended for submersible use. To ensure optimum performance and safety from you Maximus Eco pump please comply with the following instructions.

ELECTRICAL CONNECTIONS



NEUTRAL = BLUE N
EARTH = GREEN & YELLOW
LIVE = BROWN L

The pump comes complete with 10 mtrs of 3 core cable, however, should any additional cable be required then the use of an approved waterproof cable connector is essential.

- The power supply must be earthed and fused at 3amps.
- Regularly inspect the cable for damage and deterioration
- Always use a residual circuit device (RCD) having a rated residual operating current not exceeding 30 mA.
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- For permanent installation to the mains supply, it is necessary to comply with the regulations of the Local Electricity Authority.
- Consult a qualified electrician if in doubt about any aspects of wiring.

INSTALLATION

WARNING: Always unplug or disconnect the pump from the electrical supply before putting your hands (or any part of your body) in the water or whilst the pump is being installed, repaired, maintained or handled.

- All pumps are intended for submersible use and **MUST BE** under water at all times for proper operation and cooling.
- Never run a pump dry.
- The pump should be installed on a firm base in the pond so that the fountain jet is just above the surface of the water.
- If needed, the telescopic pipe can be adjusted in length (all models) and moved to find the vertical position (from model 1200).

WINTER MONTHS

During the winter months, when most decorative fountains are not required, the pump should either be removed from the pond and thoroughly dried or operated for a few minutes every week to ensure that the rotating parts remain free.

During frosty periods, operation of the pump with the fountain jet removed will assist in preventing the pond from freezing over

 
LOW FLOW TO WATERFALL/FILTER OR LOW FOUNTAIN JET

- Check outer shell is clean.
- Check impeller cover is clean.
- Check waterfall connection is not blocked
- Check t-piece flow adjuster is not set too low.
- Check hose is not blocked or kinked.
- Check fountain jet is clean.
- Check pump flow adjuster is not set to minimum.

PUMP DOES NOT APPEAR TO BE WORKING AT ALL


- Check the power supply is properly connected and working.
- Check fuse.
- Disconnect electrical supply. Remove pump and follow maintenance instructions.

MAXIMUS PUMPS FOUNTAIN JETS

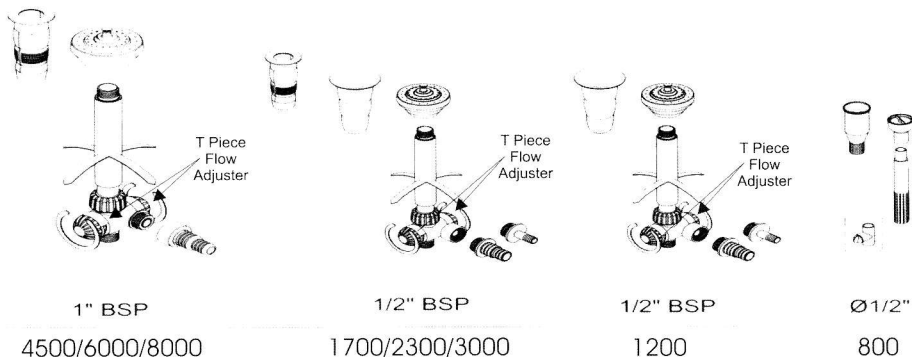


Maintenance Maximus Eco 800/1200

 1. Disconnect pump from the mains/electrical supply.
2. Remove outer shell and clean in water.
3. Remove impeller cover by rotating anti-clockwise. Inspect and clean if necessary.
4. Withdraw the magnet/impeller assembly: Inspect and clean it if necessary. Be careful not to lose the ceramic bushes of the magnet/impeller assembly. Check there is no limescale built up on magnet: If the impeller is cracked - replace it.
5. Reassembly is a straight forward reversal of the above procedure.

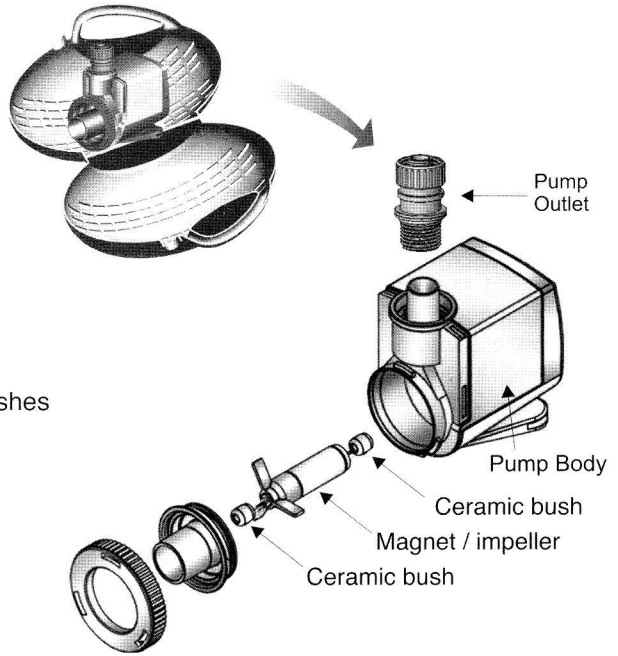

Maintenance Maximus Eco 1700/2300/3000

 1. Disconnect pump from the mains/electrical supply.
2. Remove outer shell and clean in water.
3. Remove impeller cover by rotating anti-clockwise. Inspect and clean if necessary.
4. Withdraw the magnet/impeller assembly all together with ceramic shaft and rubber cups

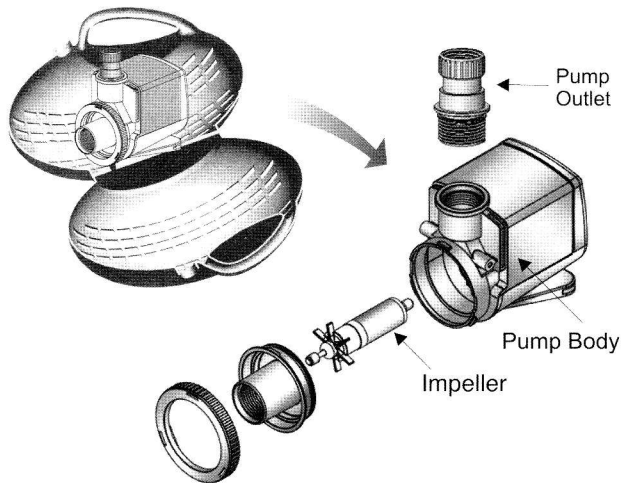


CAUTION: Ceramic shaft is hard but brittle. Inspect and clean magnet, impeller, shaft and rubber cups if necessary. Check there is no limescale built up on the magnet. Check for hairline cracks on magnet: if cracked, replace it.

5. Reassembly is a straight forward reversal of the above procedure.

Maintenance Maximus Eco 4500-6000-8000

 1. Disconnect pump from the mains electrical supply.
2. Remove outer shell and clean in water.
3. Remove the 3 Screws
4. Remove impeller housing. Inspect and clean if necessary.
5. Inspect site of impeller housing and o-ring. Clean if necessary.
6. Check impeller for any debris. Clean if necessary.
7. Check if impeller runs freely: if not, rotate several times until impeller is free to rotate.
8. There are no other consumer maintenance items in these pumps.
9. Reassembly is a straightforward reversal of the above procedure.

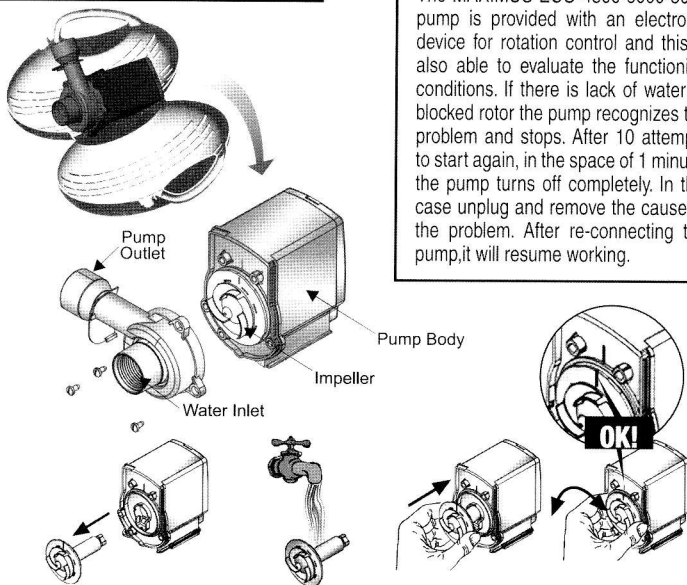

The MAXIMUS ECO 4500-6000-8000 pump is provided with an electronic device for rotation control and this is also able to evaluate the functioning conditions. If there is lack of water or blocked rotor the pump recognizes the problem and stops. After 10 attempts to start again, in the space of 1 minute, the pump turns off completely. In this case unplug and remove the cause of the problem. After re-connecting the pump, it will resume working.

WARRANTY

For 36 months (3 years) from the date of purchase OAL will repair or replace this pump, free of charge, if defective in material or workmanship. The warranty is not valid for components subjected to wear (ceramic bearings and shaft). The maintenance schedule must be followed. This warranty will be invalid if the pump is not maintained in accordance with the instructions within this manual.- To claim please see below.

LIMITATION OF WARRANTY

OAL will not be liable for normal "wear and tear" items as indicated in this owners manual. No liability is assumed with regard to loss or damage of livestock or property irrespective of the cause thereof. This warranty does not affect your statutory rights. Failure caused by misuse is not covered by this warranty.

This warranty is invalid if the product fails as the result of accidental damage, improper installation, or failure to maintain as directed in this owners manual. Neglect, misuse, modification or use with any liquid other than fresh, clean water (above freezing point, but below +35C) will invalidate this warranty. The use of this pump below the rated depth (2 metres) will invalidate this warranty. Running this pump dry or without the pump body/base cover will invalidate this warranty.

HOW TO CLAIM

DO NOT return the pump to the retailer. Either contact us by telephone/email or send the pump, securely packed With your name and address. Enclose a brief note advising the nature of the fault. If repair is claimed under warranty, proof of purchase receipt MUST be returned with the pump.



2002/96/EC - EN50419

Correct Disposal of This Product (Waste Electrical & Electronic Equipment)
applicable in the European Union and other European countries
with separate collection systems

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. • Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. • Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.



OAL WATER GARDEN PRODUCTS LTD.
Oasis House, Deer Park Ind Est, Knowle Lane
Fair Oak, Eastleigh, Hants, SO50 7PZ
+44 (0) 23 8060 2602
Email: info@oasis-water-gardens.com
www.oalwatergardens.com