


SOLAR POWERED


Pump, Panel and Remote Kit (2150PKD-G)

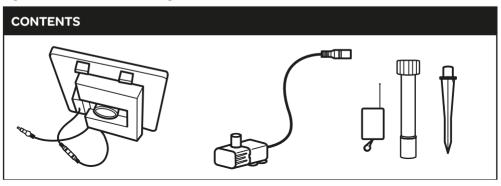


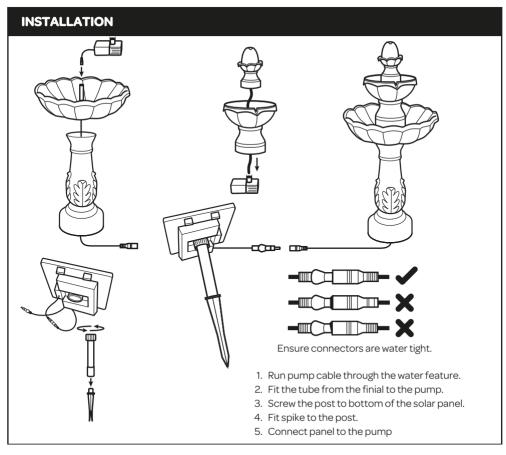

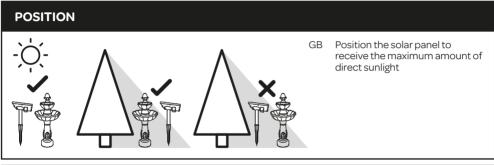





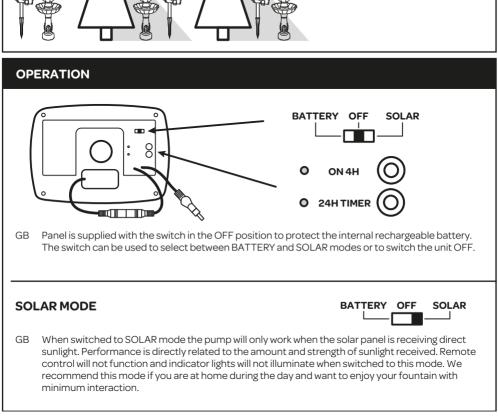


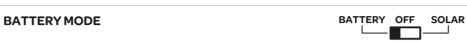

GB When switched to BATTERY mode the solar panel will charge the internal battery so that power is stored for when you want to use it. The pump can now be activated using the remote control or the push button switches on the back of the panel. We recommend that you charge the battery for 2 days before first using the pump to ensure optimum performance; simply leave the solar panel in the sun for 2 days with the switch in the BATTERY or OFF position.

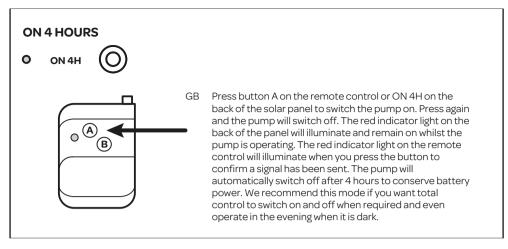

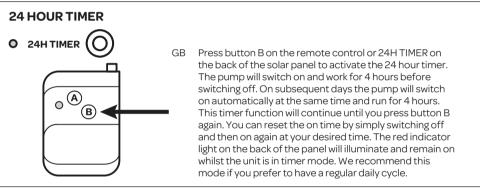


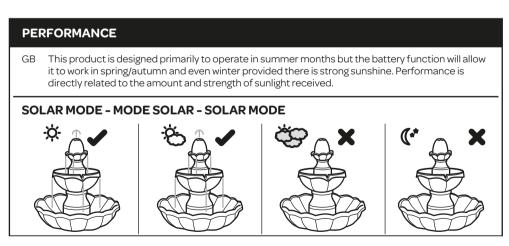


BATTERY MODE - MODE BATTERY - BATTERIE MODUS

GB The battery has capacity for up to 8 hours of operation, 2 cycles of 4 hours. The table below shows how long on average it will take to fully charge from flat. In most cases it will not take this long as there will be charge left in the battery.

	Spring	Summer	Autumn	Winter
	- <u>;</u> ;-		()·	**
To fully charge	3-4 days	2 days	3-4 days	12+ days
Charge per day	3-4 h	5-6 h	3-4 h	0.5-1 h

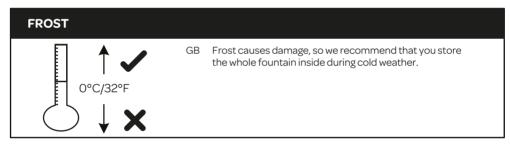

MAINTENANCE

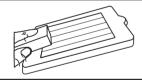

GB Regularly clean the solar panels using water or glass cleaner, in conjunction with a non-abrasive sponge.


PUMP CLEANING GB Use water or glass cleaner. Filter


Downloaded from www.watergardeningdirect.com


BATTERY

GB Rechargeable battery packs become less efficient with repeated charge and discharge cycles. The capacity of the battery may also reduce over time and you may not achieve the 12 hour operation. If you find that the battery appears less efficient or does not run as long, we first suggest you try to boost charge it. To do this leave off for 3 to 5 sunny days to allow the maximum charge to the battery. We suggest you do this occasionally anyway to help prolong the battery life. If after this boost charge your battery still does not perform to expectations you should seek a replacement from Smart Solar (available via our website www.sgouk.com). All our battery packs are covered by a 1 year warranty.


CHANGE BATTERY - CHANGEMENT DE BATTERIE - BATTERIEWECHSEL

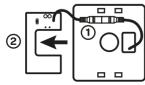


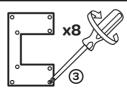

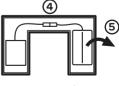

GB Unplug the battery connector (1) and slide out the battery case (2). Undo the 8 screws (3) and remove the cover. Disconnect the battery connector (4), replace the battery (5) and reconnect.

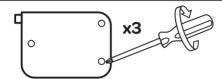

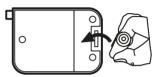

GB If your remote control stops working you can replace the internal battery. Remove the 3 screws as shown and replace with the same battery type 23A 12V Battery (A23/MN21)

BATTERY DISPOSAL

GB Dispose of batteries according to local regulations.



PROBLEM SOLVING

- GB 1. Check the fountain is positioned correctly, receiving sunlight and not in shade.
 - 2. Check water level and ensure the pump is submerged.
 - 3. Check connections between the pump and panel and battery.
 - 4. Clean all parts as shown and change water.
 - 5. Check tubes are connected and bung is securely fitted.
 - 6. Check battery and boost charge it as described.
 - 7. If problems persist contact customer services.

1YEAR WARRANTY

GB Email: uksupport@sgpuk.com Tel: +44(0)1443 843306

CK C€

www.sgpuk.com